



INSTRUCTION MANUAL

#14420 25 TON JACK STAND PIN STYLE



!CAUTION!

READ AND FOLLOW ALL WARNINGS, CAUTIONS AND INSTRUCTIONS ASSOCIATED WITH THE PROPER USE OF THIS PRODUCT, FAILURE TO COMPLY COULD RESULT IN DEATH, BODILY INJURY AND/OR DAMAGE TO EQUIPMENT.

This product as well as all tire tools, should never be used by persons unless they have been trained properly according to the O.S.H.A. regulation #29CFR 1910.177 entitled "Servicing Single Piece & Multipiece Rim Wheels". Copies of this regulation can be obtained by contracting this manufacturer. 352-799-1111 or ameintl.net.

MODEL	CAPACITY	MIN. HEIGHT	MAX HEIGHT	BASE DIMENSIONS
14420	20 TON	26.6"	41.3"	13" x 13"

Important Safety Information


!WARNING!

Do not overload Jack stands beyond rated capacity.

Overloading can cause damage to or failure of the jack stands and bodily harm.

Position load on center of saddle only. Always use stands in pairs on hard level surface capable of sustaining the load. Use of stands on anything other than a hard level surface can result in stand instability and possible loss of load.

1. Refer to your vehicle owner's manual for proper jacking procedures. Lift only on areas of the vehicle specified by the vehicle manufacturer.
2. Position stands under vehicle at points specified by the vehicle manufacturer as proper load support points.
3. To adjust stands:
 1. Screw low/high stand fitted with thrust bearing.
 2. Reinforced low stand with controlled pinholes, turn, and oil jack stand post.
 3. Reinforce high stand with holes without controlled pin.
 4. Carefully lower load onto stands.

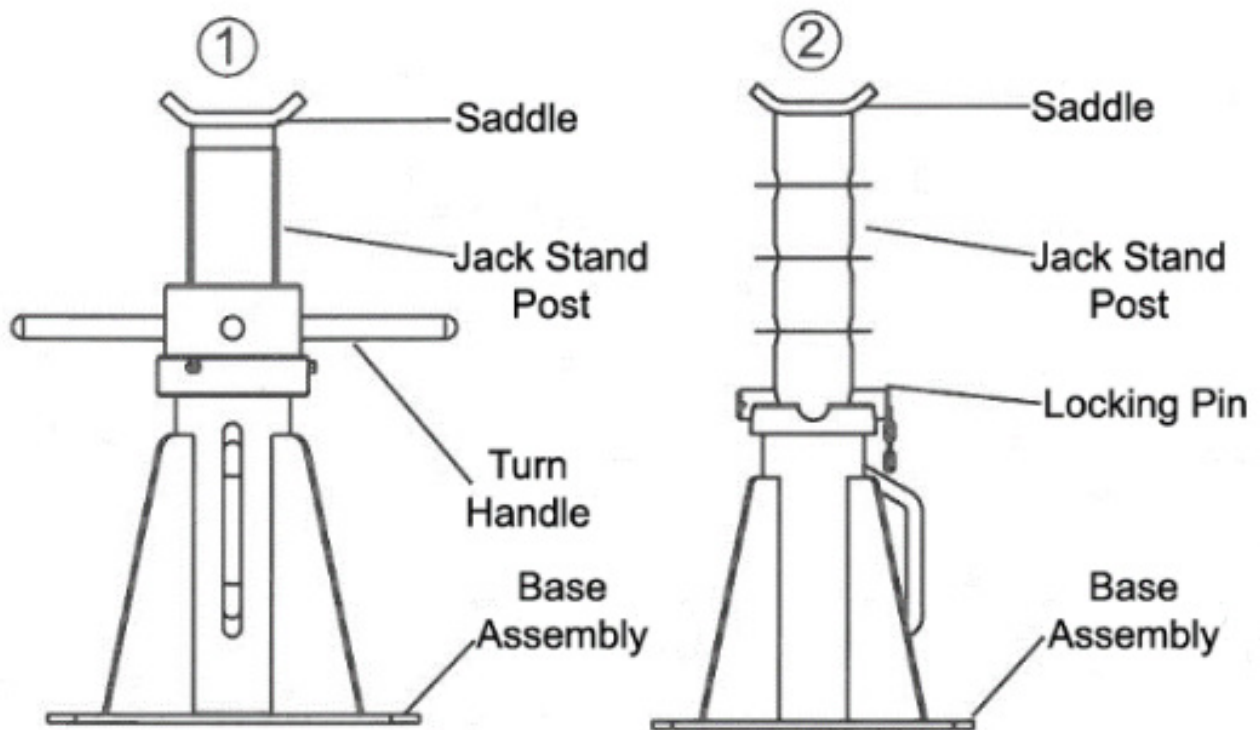

Maintenance & Inspection

1. Visual Inspection shall be made before each use of the stands, checking for cracks, cracked welds and missing and / or damaged parts. Any stand that appears to be damaged in any way should be removed from service immediately.
2. Because of the potential hazards associated with the misuse of equipment of this type, no modifications should be made of the product without consent from manufacturer.

AME INTERNATIONAL

2347 Circuit Way, Brooksville, Florida USA 34604

Phone: (+1) 352.799.1111 • Toll Free (+1) 877.755.4AME (4263)

Fax: (+1) 352.799.1111 • E-mail: sales@ameintl.net