




PARTS BREAKDOWN

Parts List For

Air Hydraulic Pump

15920

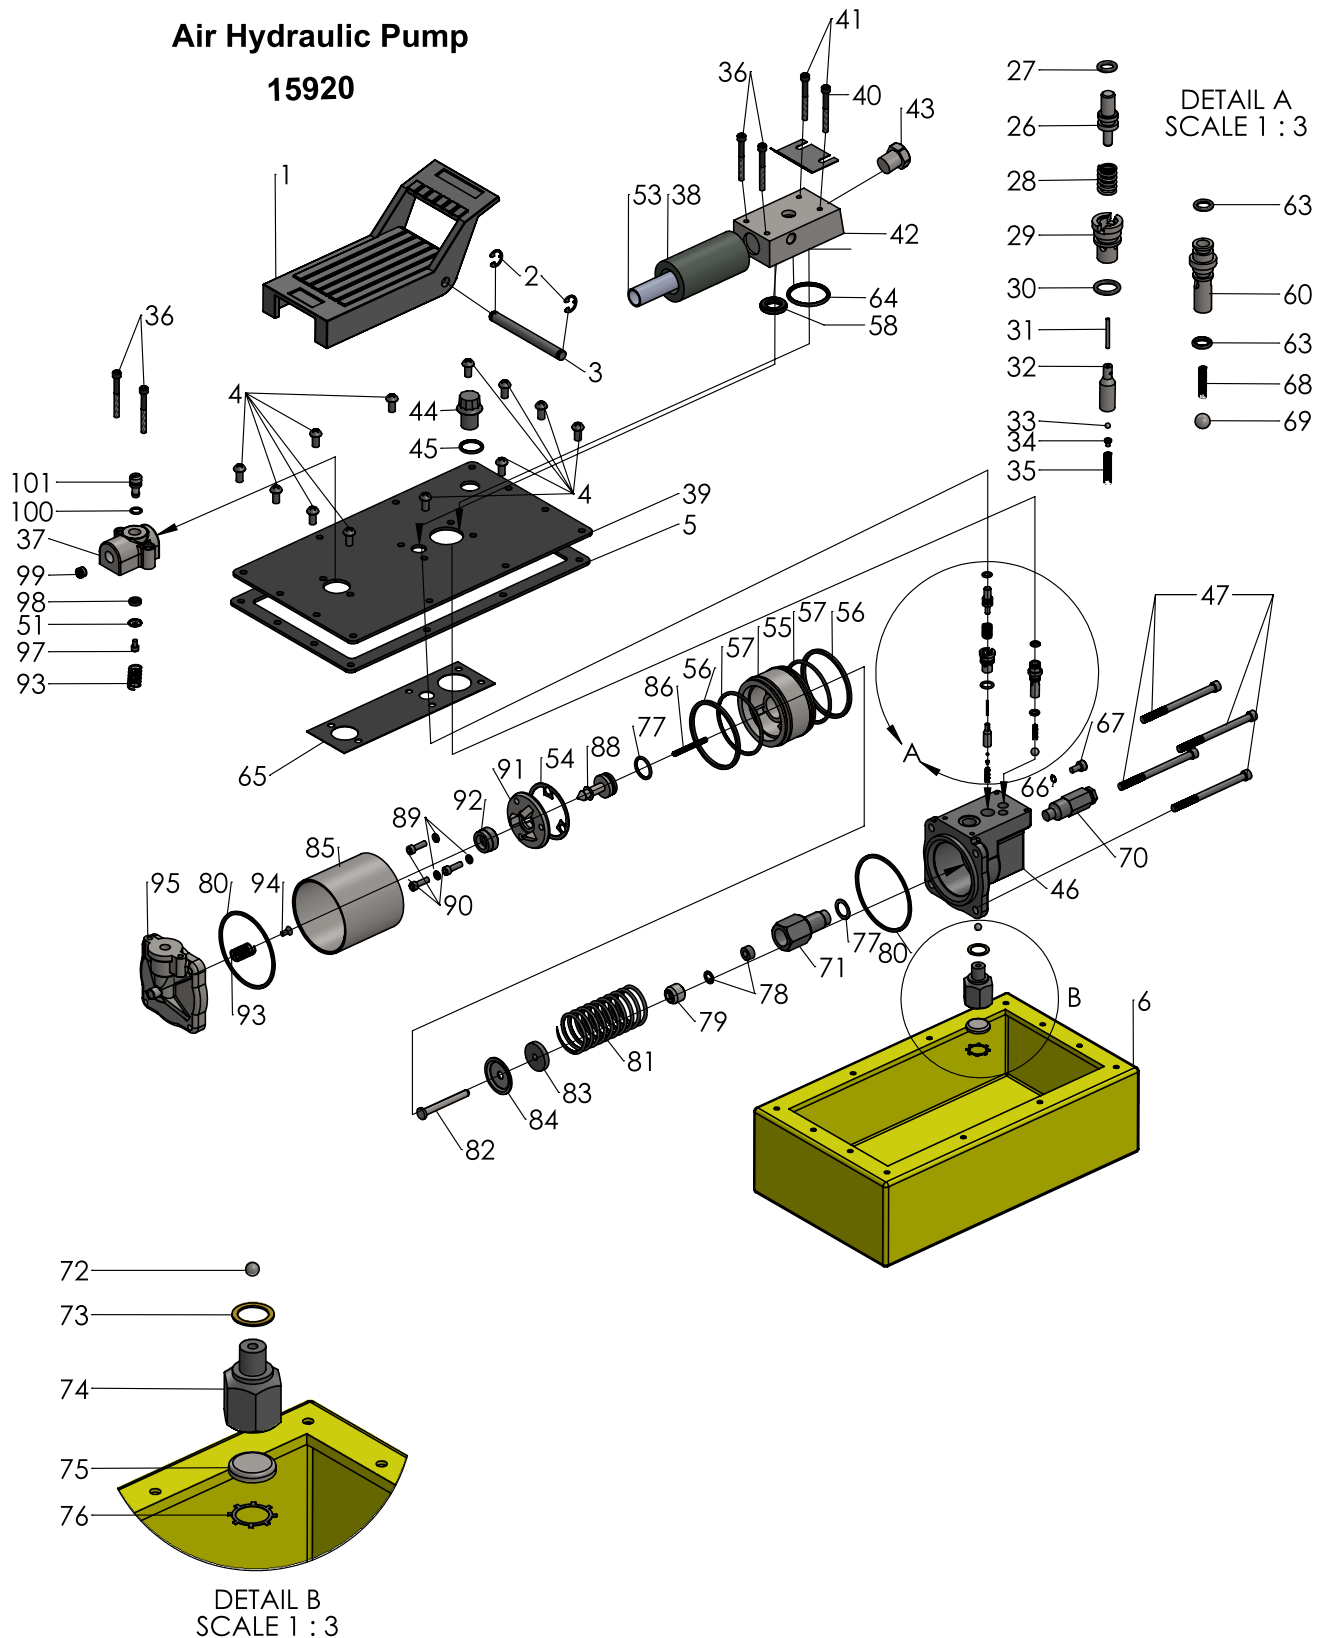



PARTS BREAKDOWN

Parts List For

Air Hydraulic Pump

15920

Item	Part No.	Stock No.	Qty	Description	Item	Part No.	Stock No.	Qty	Description
1	15920-001	41322	1	Foot Pedal	58	15920-058	*10276	1	O-Ring
2	15920-002	*11032	2	Retaining Ring	59	15920-059	*10272	1	O-Ring
3	15920-003	28386	1	Pin	60	15920-060	34378	1	Check Valve Body
4	15920-004	211060	6	Screw	61	15920-061	*250638	1	Filter Disc
5	15900-005	*33853	1	Reservoir Gasket	62	15920-062	*11088	2	Retaining Ring
5	15920-005	*46271	1	Reservoir Gasket	63	15920-063	*12522	2	O-Ring
5	15940-005	*47409	1	Reservoir Gasket	64	11010-015	*11841	1	O-Ring
6	15900-006	61243	1	Reservoir	65	15920-065	*351021	1	Gasket
6	15920-006	64153OR	1	Reservoir	66	11000-022	*10442	1	Washer
6	15940-006	61165	1	Reservoir	67	15920-067	10002	1	Cap Screw
7	15920-007	*305494	1	Decal	68	15920-068	*10445	1	Compression Spring
8	15920-008	302466	1	Spring Clip	69	15920-069	*10423	2	Steel Ball
9	15920-009	260154	1	Trade Name Decal	70	15920-070	-	-	Relief Valve
10	15920-010	251762	1	Warning Decal	71	15920-071	45278	1	Piston Cylinder
11	15920-004	211060	4	Screw	72	11010-014	*10375	1	Steel Ball
11	15920-004	252168	4	Screw	73	11010-019	*10261	1	Copper Washer
25	15920-025	*2066504	1	Foam Tube	74	15920-074	308893	1	Filter Adapter
26	15920-026	28227	1	Release Vale Button	75	15920-075	214578	1	Filter
27	15920-027	*10266	1	O-Ring	76	15920-076	214586	1	Retaining Ring
28	11010-013	*13944	1	Compression Spring	77	15920-077	*10263	1	Copper Washer
29	15920-029	34377	1	Poppet Retainer	78	15920-078	*13934	1	U-cup & Backup
30	15920-030	*15279	1	O-Ring	79	15920-079	*304295	1	Retainer
31	15920-031	13937	1	Dowel Pin	80	15920-080	*17429	2	Back up Washer
32	15920-032	29037	1	Release Valve Poppet	81	15920-081	*13938	1	Compression Spring
33	15920-033	*14443	1	Steel Ball	82	15920-082	28226	1	Piston
34	15920-034	209736	1	Ball Retainer	83	15920-083	203143	1	Bumper
35	15920-035	*13959	1	Compression Spring	84	15920-084	210994	1	Spring Guide
36	15920-036	11151	4	Cap Screw	85	15920-085	37434	1	Air Cylinder
37	15920-037	37199	1	Intake Air Valve Body	86	15920-086	*12692	1	Compression Spring
38	15920-038	*29992	1	Foam Tube	87	15920-087	*211052	1	O-Ring
39	15920-039	420965BK2	1	Cover Plate	88	15920-088	305475	1	Exhaust Valve Stem
39	15920-039	58688BK2	1	Cover Plate	89	15920-089	*10241	3	Lock washer for #10 Bolt
39	15920-039	58706BK2	1	Cover Plate	90	15920-090	211054	3	Screw
40	15920-040	11089	2	Washer	91	15920-091	33822	1	Piston End Plate
41	15920-041	11435	2	Cap Screw	92	15920-092	*28183	1	Piston Poppet
42	15920-042	58563	1	Release Valve Body	93	15920-093	*205679	1	Compression Spring
43	P-38	11127	1	Pressure Plug	94	15920-094	*205674	1	Screw
44	15920-044	20937	1	Filler Cap	95	15920-095	51480	1	Rear Head
45	15920-045	*10273	1	O-Ring	96	15920-096	12691	1	Compression Spring
46	15920-046	64767	1	Pump Body	97	15920-097	13936	1	Soc. Hd Cap Screw
47	15920-047	17428	4	UNC x 3-1/2	98	15920-098	28198	1	Seal Guide
51	15920-051	*28182	1	Air Valve Poppet	99	15920-099	*216296	1	Filter Disc

2347 Circuit Way, Brooksville, Florida, USA 34604

Phone: (+1) 352-799-1111 Toll Phone: (+1) 877-775-4AME (4263)

Fax: (+1) 352-799-1112 E-mail: sales@ameintl.net www.ameintl.net



PARTS BREAKDOWN

Parts List For

Air Hydraulic Pump

15920

52	15920-052	*251717	1	O-Ring	100	15920-100	*10267	1	O-Ring
53	15920-053	28387	1	Muffler					
54	15920-054	*28239	1	Gasket					
55	15920-055	52390	1	Piston Body					
56	15920-056	*14265	2	Piston Ring					
57	15920-057	*251835	2	O-Ring					