



INSTRUCTION MANUAL



71631 Heavy Duty Wheel Puller with Double Hook

2347 Circuit Way, Brooksville, Florida, USA 34604

Phone: (+1) 352-799-1111 Toll Phone: (+1) 877-775-4AME (4263)

Fax: (+1) 352-799-1112 E-mail: sales@ameintl.net www.ameintl.net



Read this manual and follow all the safety rules and operating instructions before using this product.



INSTRUCTION MANUAL

Operation



- 1. Screw a set of lug nuts on opposite sides of the tire to protect the wheel stud.**




- 2. Insert the heavy duty wheel puller hooks into the rim and brace the heel of the tool against the center hub.**



INSTRUCTION MANUAL



- 3. Apply pressure to level to loosen wheel off hub.**

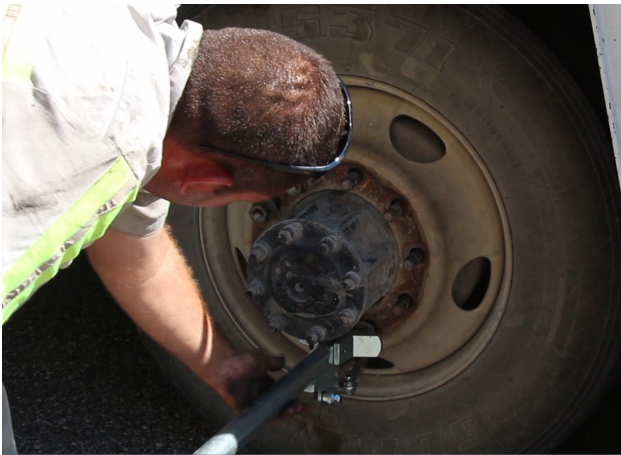

- 4. Insert the heavy duty wheel puller hooks into the opposite side and repeat procedure. Repeat steps 2&3 till the tire is removed.**



INSTRUCTION MANUAL

Parts Diagram



Double hooks are used when the hand holes are in line with the studs. (Mostly aluminum wheels.)

