



***MAG-  
BEAR***



# INSTRUCTION MANUAL

## **#95055 MAG-BEAR 25' RETRACTABLE MAGNETIC BARRIER**



## WARNING!

To avoid serious personal injury, always wear proper protective gear, such as hard hats, safety glasses, gloves, and steel toe shoes when using hydraulic equipment. Failure to chock the wheels and crib the vehicle can result in serious injury or death. Always deflate tires before removing a wheel, a rim, or part of a rim clamp or nut. If you do not deflate the tire, the tire could explode, causing serious injury or death. Always stand to one side of the rim when using the bead breaker. Standing to one side of the bead breaker allows you to maintain control of the bead breaker. If it is not seated properly and flies off the rim, the bead breaker could cause serious injury or death.

## Important Safeguards

---

Read these instructions carefully and retain them for future use.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

- Be cautious when locking/unlocking the product. Keep hands away from the locking/unlocking mechanisms to prevent fingers from being trapped and pinched.
- Do not let children climb on or play with the product.
- Do not use this product if any parts are missing, damaged, or worn.
- Do not put this product near emergency exits.
- Regularly examine the product for wear and tear. Stop using the product at first sign of damage or if parts become detached.

## CAUTION!

**BEFORE USING THIS TOOL, READ INSTRUCTIONS THOROUGHLY. THE USE OF THIS TOOL IN ANY OTHER APPLICATION IS BOTH A VOID OF WARRANTY AND CAN LEAD TO INJURY OR EVEN DEATH.**

## Cleaning & Maintenance

---

- To clean the product, wipe with a soft, slightly damp cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.
- Regularly check that all the components and fasteners are tightened.
- Store the product in a cool and dry place away from children and pets, ideally in its original packaging.
- Avoid any vibrations and shocks.

## WARNING!

This product as well as all tire tools should never be used by persons unless they have been properly trained according to O.S.H.A. Regulation #29CFR1910.177 entitled "Servicing Single-Piece and Multi-Piece Rim Wheels."

## Operating Instructions

### 1. Select an Appropriate Location:

Determine the area where you need to restrict access. Ensure that the magnetic mount can securely attach to a metal surface nearby.

### 2. Position the Barrier:


Locate a suitable metal surface (e.g., a service truck, the equipment being serviced, a door frame, a metal post, or a steel column) near the area you want to control. The magnetic base should have a strong connection to this surface.

### 3. Attach the Magnetic Mount:


Place the magnetic mount on the selected metal surface and ensure it's securely attached. Make sure the surface is clean and free from debris, as this can affect the strength of the magnetic connection.

### 4. Extend the Retractable Belt:

Locate the retractable belt housing at the top of the barrier pole. To lock the belt, turn the dial located at the base of the belt connection clockwise 180 degrees. To release the belt, turn the dial located at the base of the belt connection clockwise an additional 180 degrees.

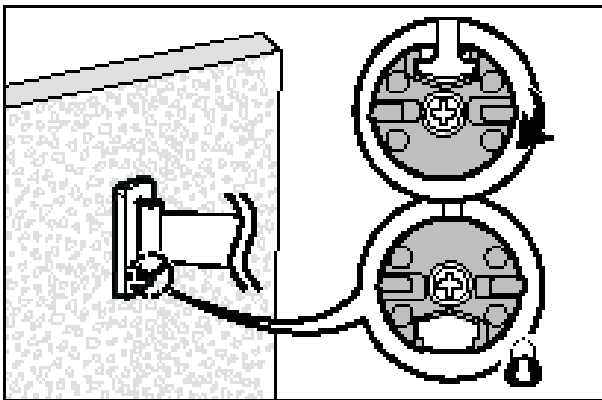

**Locking**

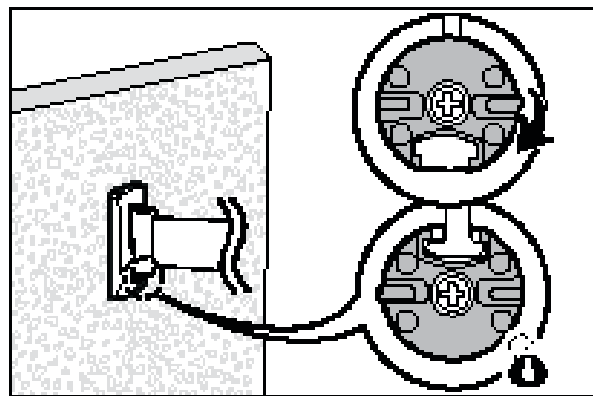

**Unlocking**

## Operating Instructions Cont.

---

### **5. Pull Out the Belt:**

Gently pull out the retractable belt to the desired length to create the barrier. Be cautious not to pull it out too quickly or forcefully, as this can cause it to become tangled or damaged.

### **6. Secure the Belt:**

Once you've extended the belt to the desired length, find another suitable anchor point for attaching the belt's end.

### **7. Attach the Belt End:**

Attach the end of the belt onto the anchor point securely. Ensure that the belt is taut and properly aligned to create a clear barrier.

### **8. Adjust as Needed:**

If you need to change the length or position of the barrier, simply unlock the belt, make the necessary adjustments, and re-lock it.

### **9. Monitor and Maintain:**

Periodically check the barrier to ensure it remains secure and in good working condition. Clean the belt if it becomes dirty or stained.

### **10. Remove the Barrier:**

To remove the barrier, unlock the belt, detach it from the anchor point, and retract it back into the housing by gently guiding it in. Ensure the magnetic mount is properly detached from the metal surface.

By following these steps, you can effectively use a magnetic-mounted retractable belt barrier to create a safer and more restricted work-site.

## AME INTERNATIONAL

2347 Circuit Way, Brooksville, Florida USA 34604

Phone: (+1) 352.799.1111 • Toll Free (+1) 877.755.4AME (4263)

Fax: (+1) 352.799.1111 • E-mail: [sales@ameintl.net](mailto:sales@ameintl.net)