




92200

OTR O-RING INSTALLER TOOL

OTR O-Ring Installer Tool

- Installs/removes O-Rings on OTR assemblies up to 30"
- Pushes the rim flange back for easy installation of the O-Ring

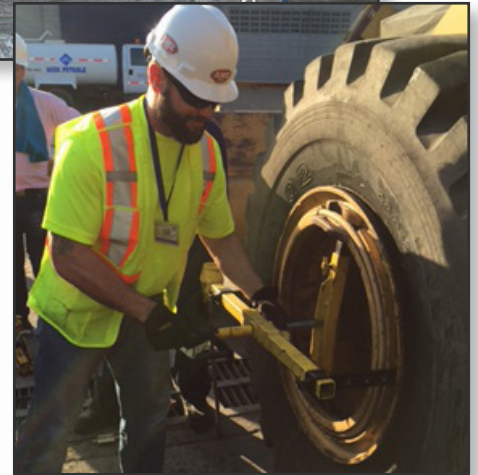

2347 Circuit Way
Brooksville, FL 34604
352.799.1111 - sales@ameintl.net



www.ameintl.net